

Tonic Center Screen Assembly Instructions

Tools Required

Cordless drill, magnetic insert-bit holder

ITEM NO.	COMPONENT	QTY
A	TONIC BENCH INFILL PANEL	1
B	CENTER SCREEN ASSEMBLY	1
C	5/16-18 x 1 1/4" SHCS BUTTON HEAD SCREWS	2

Step 1 – Install one bolt

Lay the screen assembly on its side on a work surface. Position it so that the bottom edge (with the brackets) is hanging over the edge of the work surface slightly. Hold the infill panel and align one of the small round holes with a corresponding hole in the screen bracket. Be sure that the counter-bored side of the hole is on the side of the infill panel that is opposite the screen. Thread one of the 5/16-18 bolts through the infill panel and into the screen bracket.

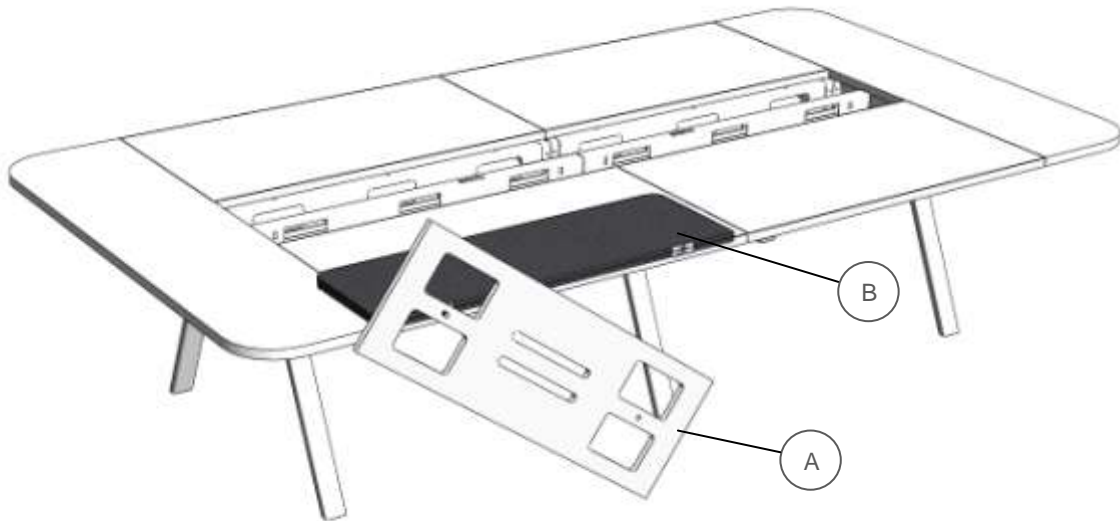


Figure 1

Tonic Center Screen Assembly Instructions

Step 2 – Install second bolt

Lift the screen and align the second hole in the panel with the hole in the second bracket. Thread the second bolt. Tighten both bolts



Figure 2

Step 3 – Place screen / infill assembly onto bench

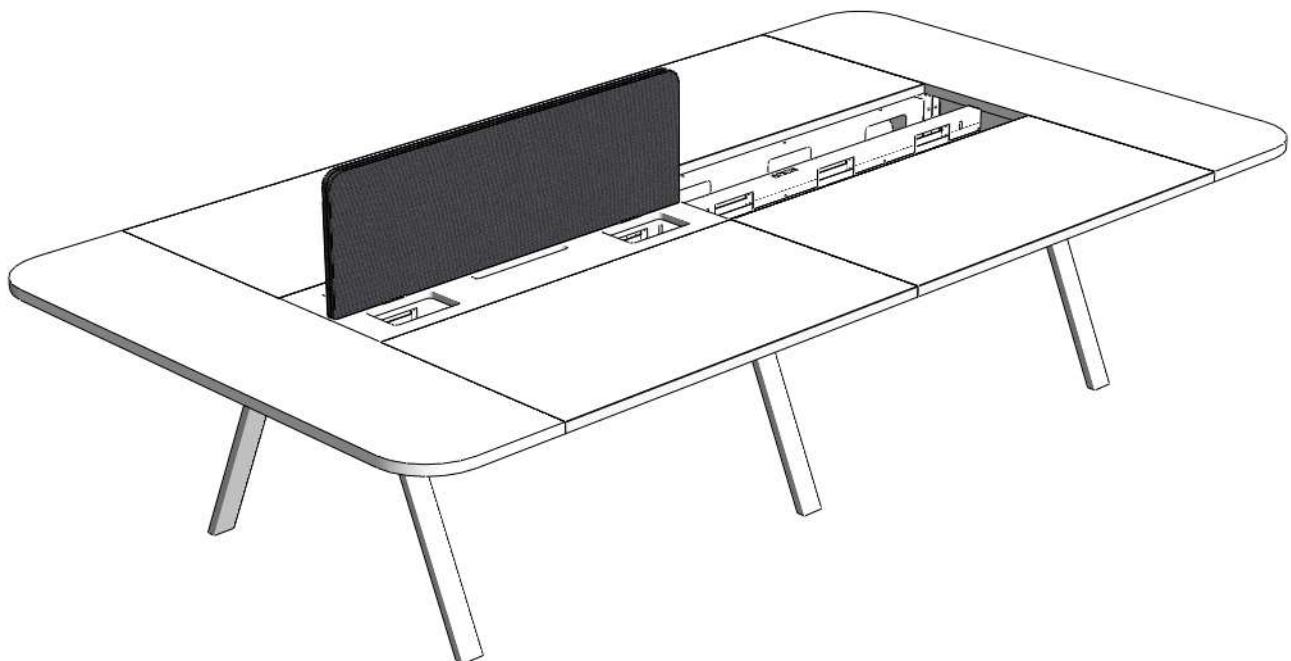


Figure 3

Operating, maintenance, and installation instructions are available at <https://watsonfg.box.com/installation>