



ASSEMBLY

Miro Desk

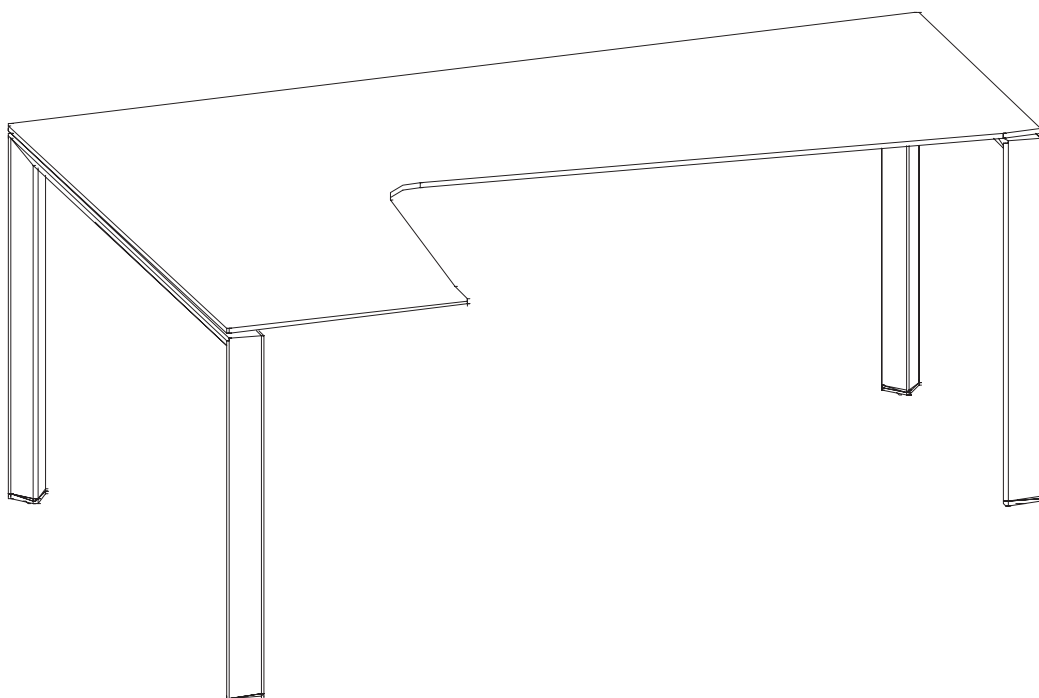

View Digitally

Miro Desk Typicals

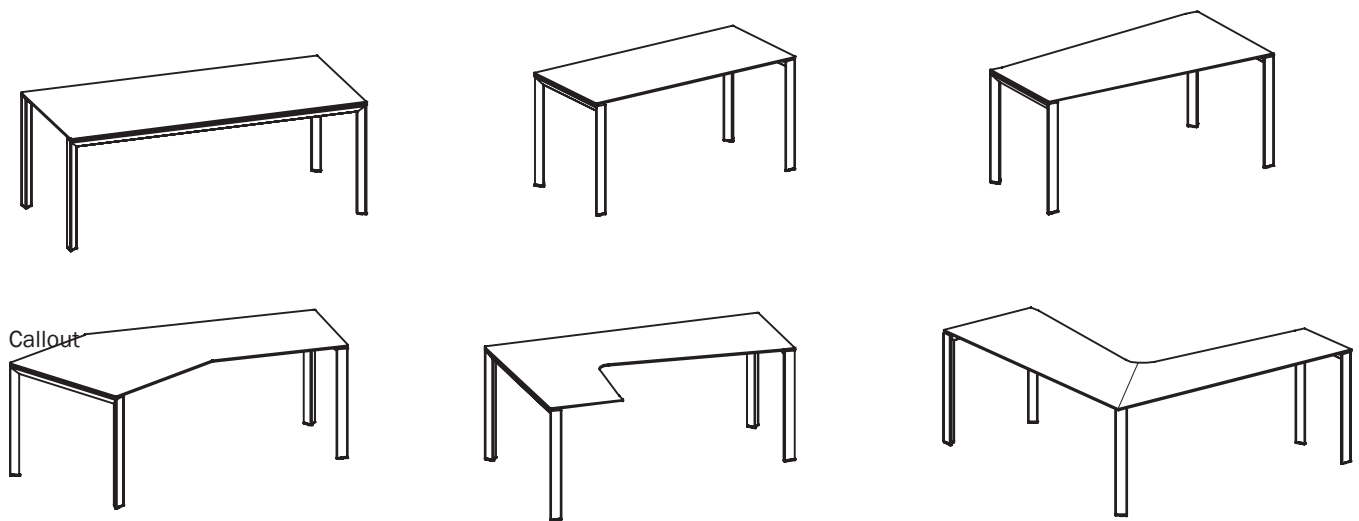

Fasteners



1/4-20x3/8"
Pan Head Screw
(126665)



#10x5/8"
Pan Head Wood
Screw (122800)



#8-1/2"
Pan Head Wood
Screw (127000)



#8x32x1/4"
Pan Head Screw
(121538)



M6-1x40mm
Pan Head Screw (125293)



#10-32x3/8"
Phillips Pan Head
Screw (121376)




M6-1x12mm
Nylock Nut
(888152)



M6-1x12mm
Button Head Socket
Cap Screw (125290)




1/4-20x1 1/4"
Connector Bolt (022791)



#10 x 1"
Screw, Truss Head
PH ZN(122850)

Product Basic Components

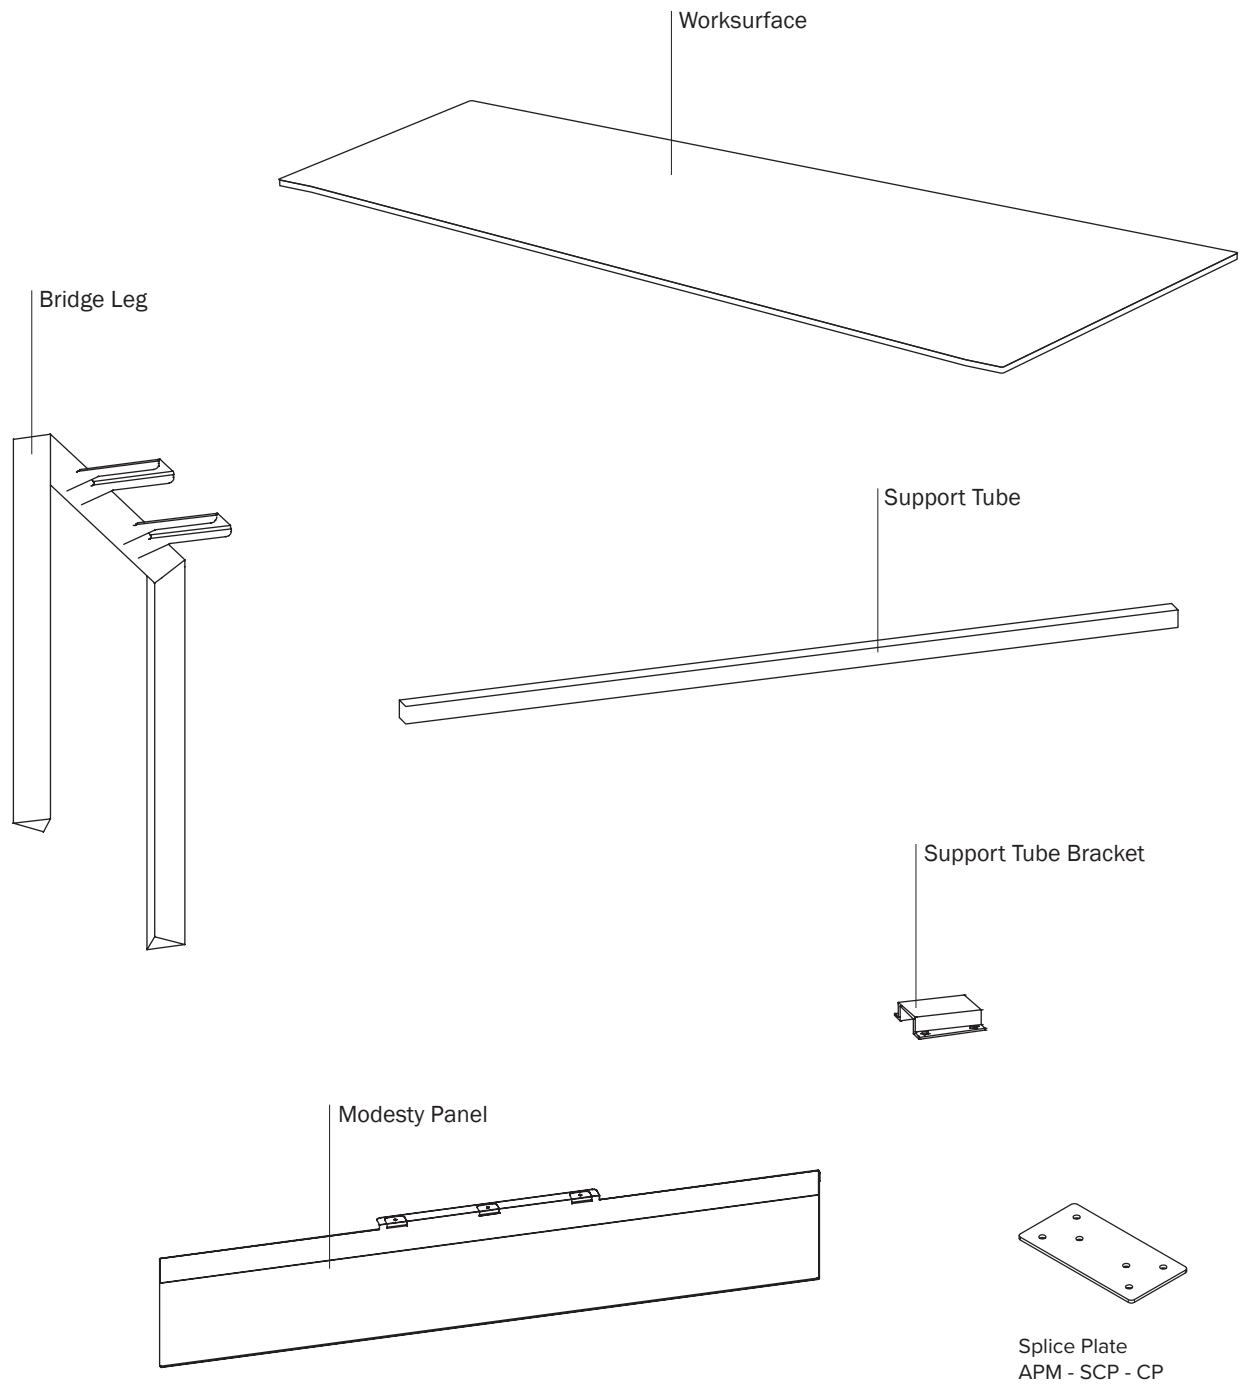


1. Install Support Tube

Center the support tube in its designated pocket on the underside of the surface. Position 2 clamping brackets (490154F) on the ends of the tube and the 3rd bracket in the center. Align brackets to pilot holes and secure with wood screws provided.




PPHWS
#10 x 3/4"
Wood Screw

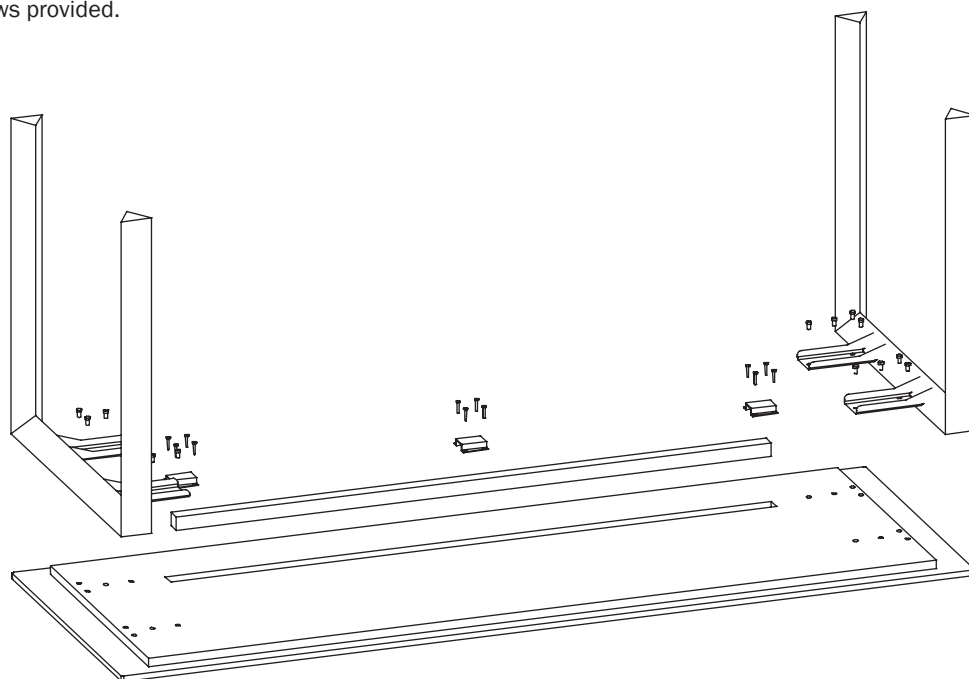


2. Attach Bridge Legs

Align holes in leg brackets to the threaded inserts in the worksurface. Attach legs to the surface with screws provided.

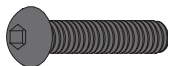






1/4-20 Pan Head
Machine Screw
(119002)

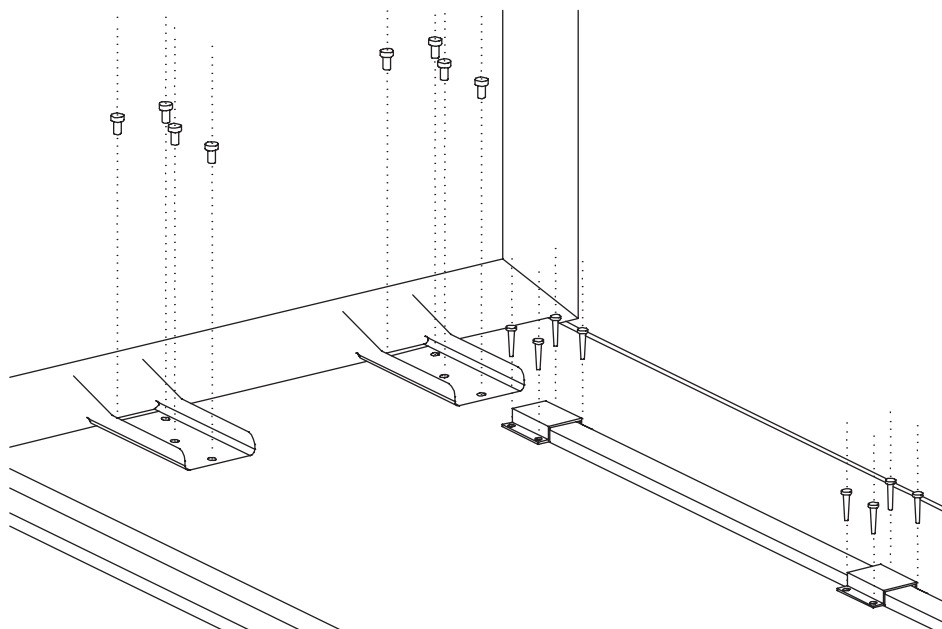

3.

Optional: Modesty Panel

Worksurfaces are predrilled for the largest modesty panel the desk can accommodate. The pilot holes may not work for your particular installation. Before installing the modesty panel, please follow the below guidelines for positioning, depending on the workstation configuration.

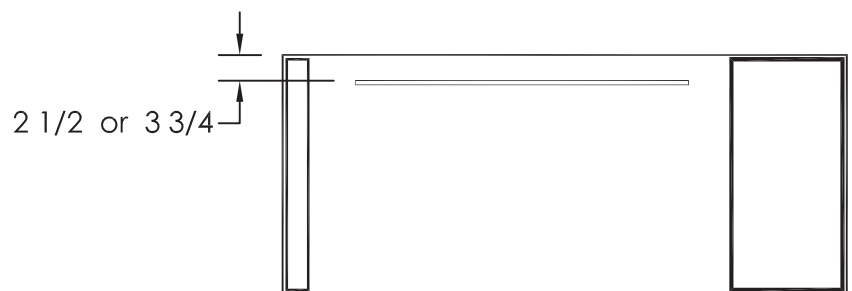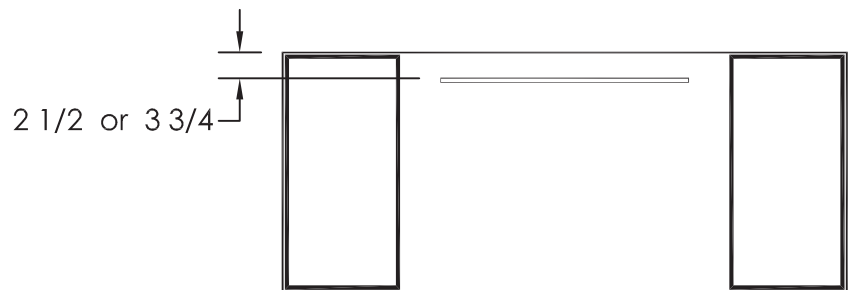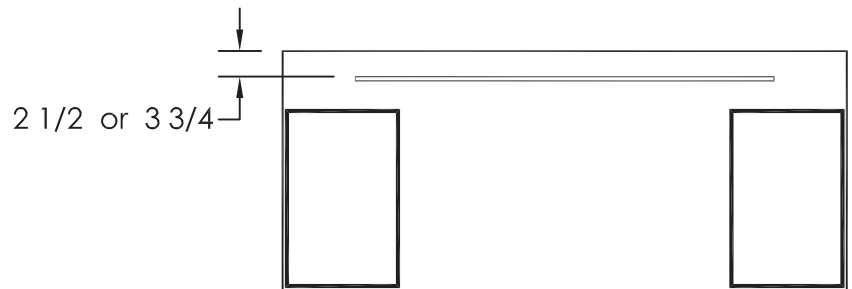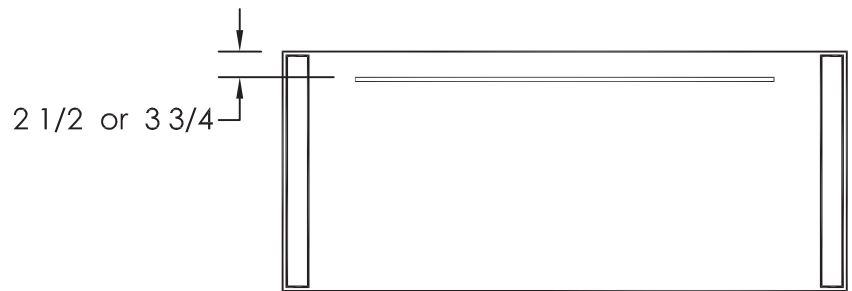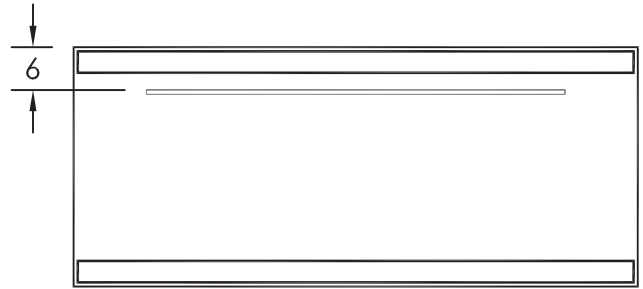


4. Attach Modesty Panel


Fully assemble and install desk in final location before installing the modesty panel. Locate the predrilled pilot holes for alignment, and using the screws provided screw the modesty panel bracket in place.



PPHWS
#10 x 3/4"
Wood Screw

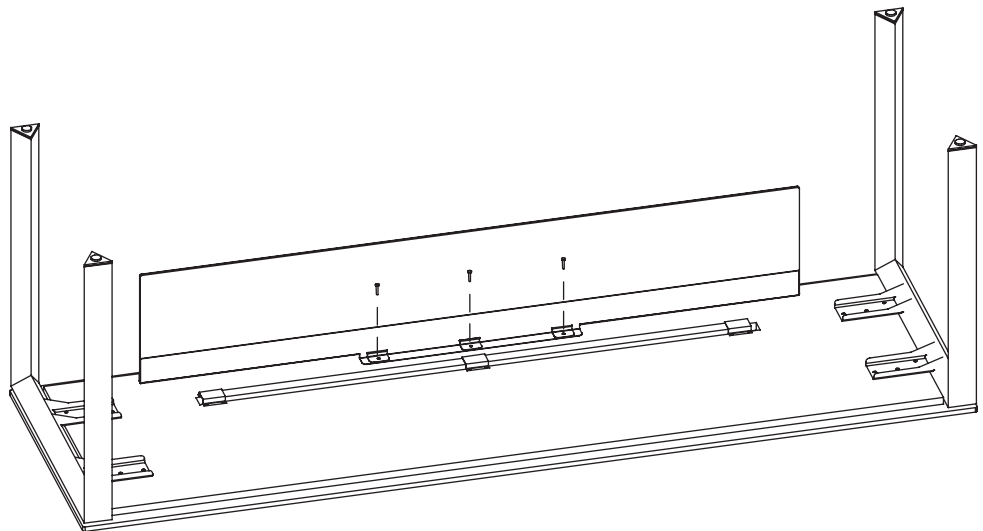


Desk with modesty panel installed.

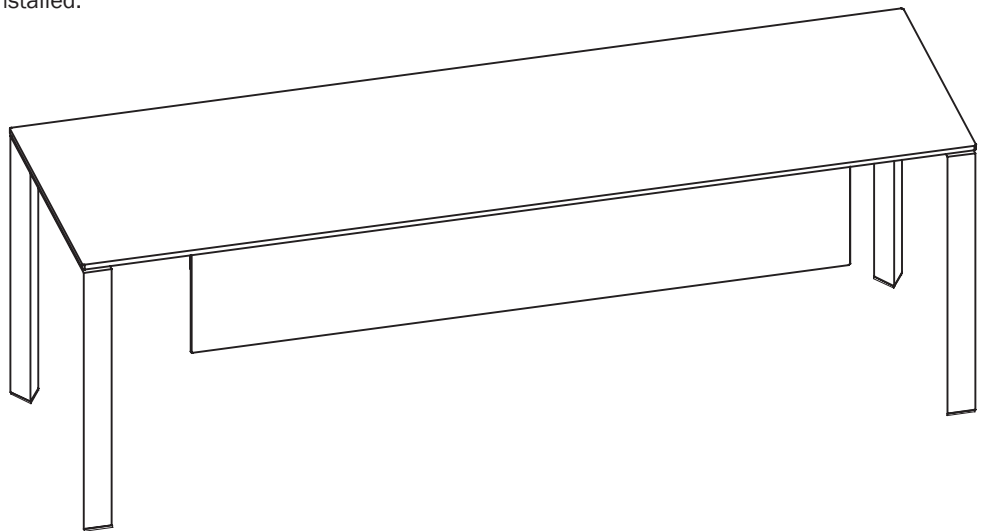


5. Attach Splice Plate (Optional)

Position splice plate (PN APM-SCP-PP) across table top seam. Depending on tite-joint location, plate can be added in front of or behind the inside corner tite-joint. Drive #10 screws (PN 122850) through the splice plate into the underside of the table.

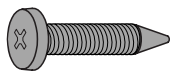

#10 x 1"
Screw, Truss Head
PH ZN(122850)

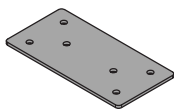

Splice Plate
APM - SCP - CP

