5-3 Drop-in—

For tables without cut outs, cut a hole that is 14" x 5" for the 5-3 Drop-In. Be sure to check for conflicting hardware placement on bottom of table.
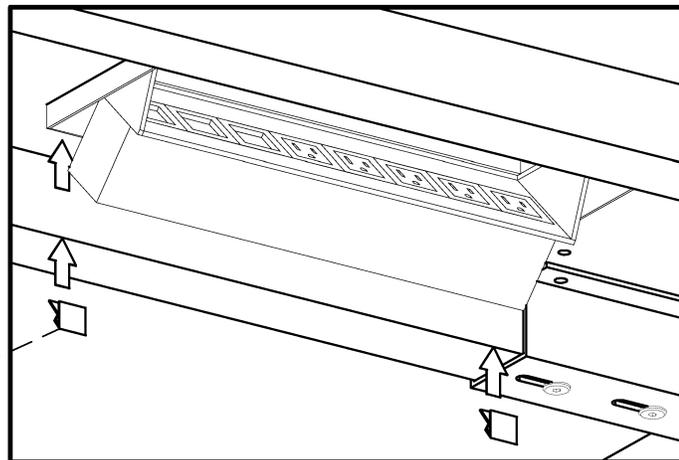
Step 1
Insert 5-3 Drop-In into hole.

Step 2
Install steel retention clips on Drop-In along hinge side.

Voice and Data
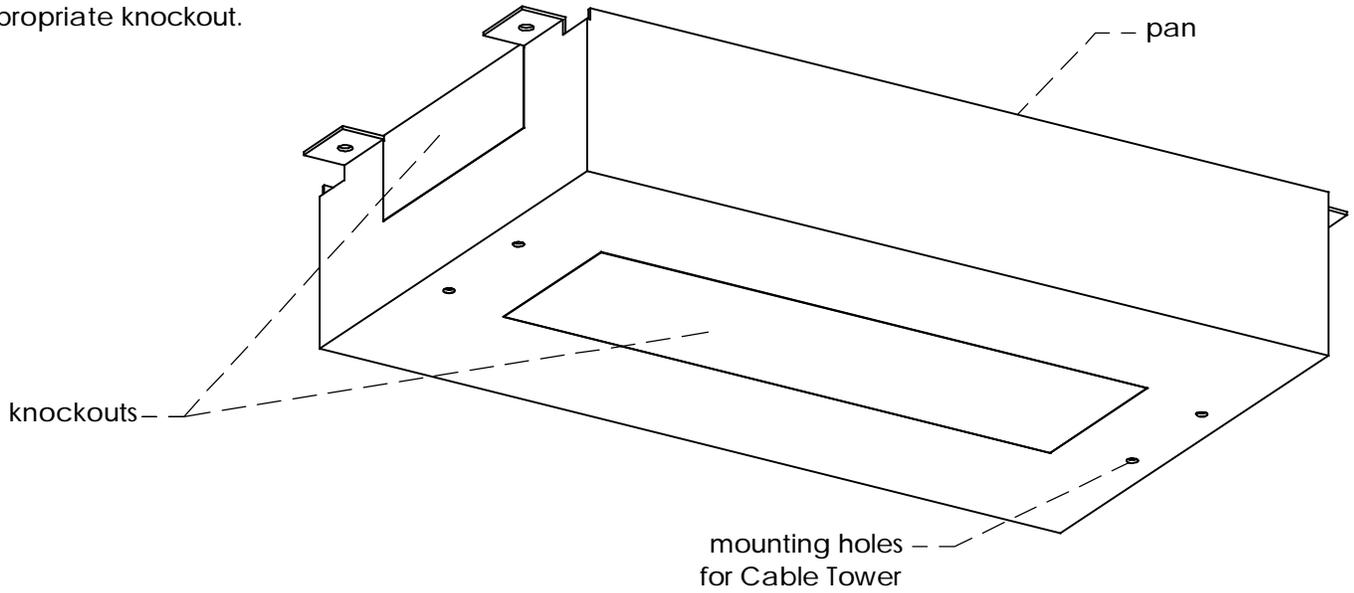Refer to manufacturer's instructions for installation of voice and data connections.
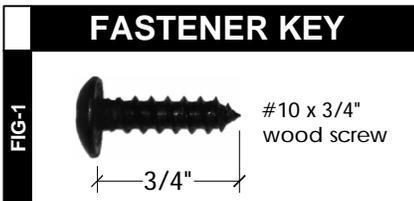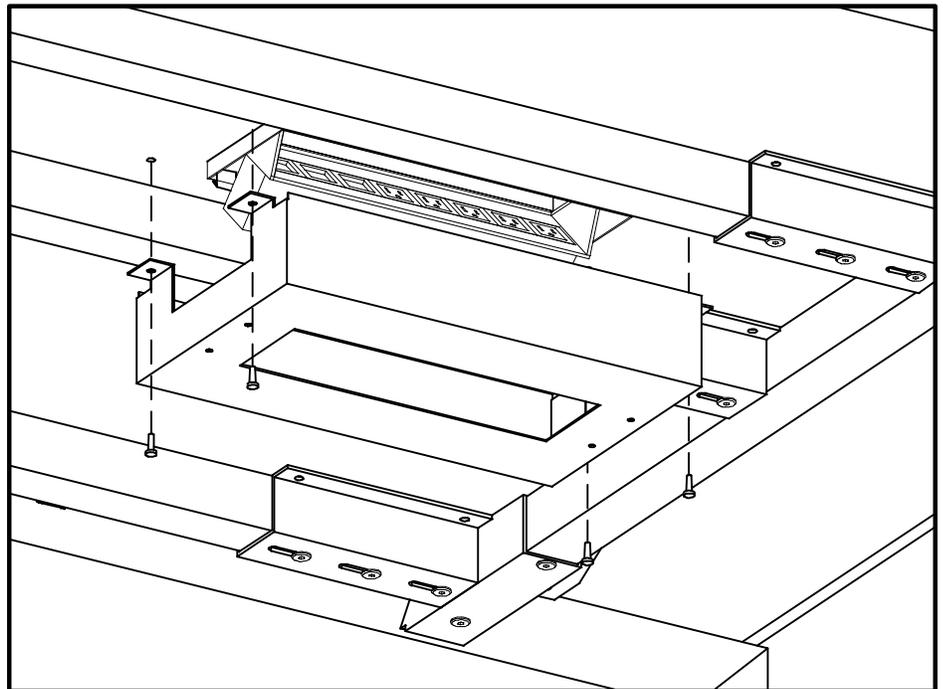
steel clip—

Step 3
Determine route for cable egress through pan and remove appropriate knockout.

pan

knockouts

mounting holes
for Cable Tower

Step 4
Install pan under 5-3 Drop-in using #10 x 3/4" wood screws (FIG-1).

FASTENER KEY
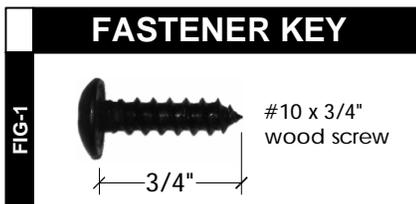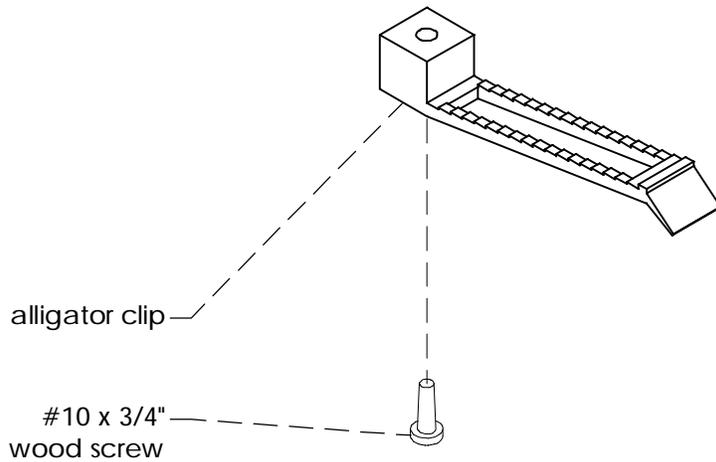
FIG-1

#10 x 3/4"
wood screw

3/4"

Step 5 - *for plug-in power*
Install alligator clips and route cables
out of pan from drop-in to Cable Tower.
Use #10 x 3/4" wood screw (FIG-1) to
attach clips.

power cable

data and voice cables

pan

alligator clip

Cable Tower

center leg
(10' and 12' table only)

Step 6
Route cables through Cable Tower
(see Cable Tower instructions).

alligator clip

#10 x 3/4"
wood screw

FASTENER KEY

FIG-1

#10 x 3/4"
wood screw

3/4"
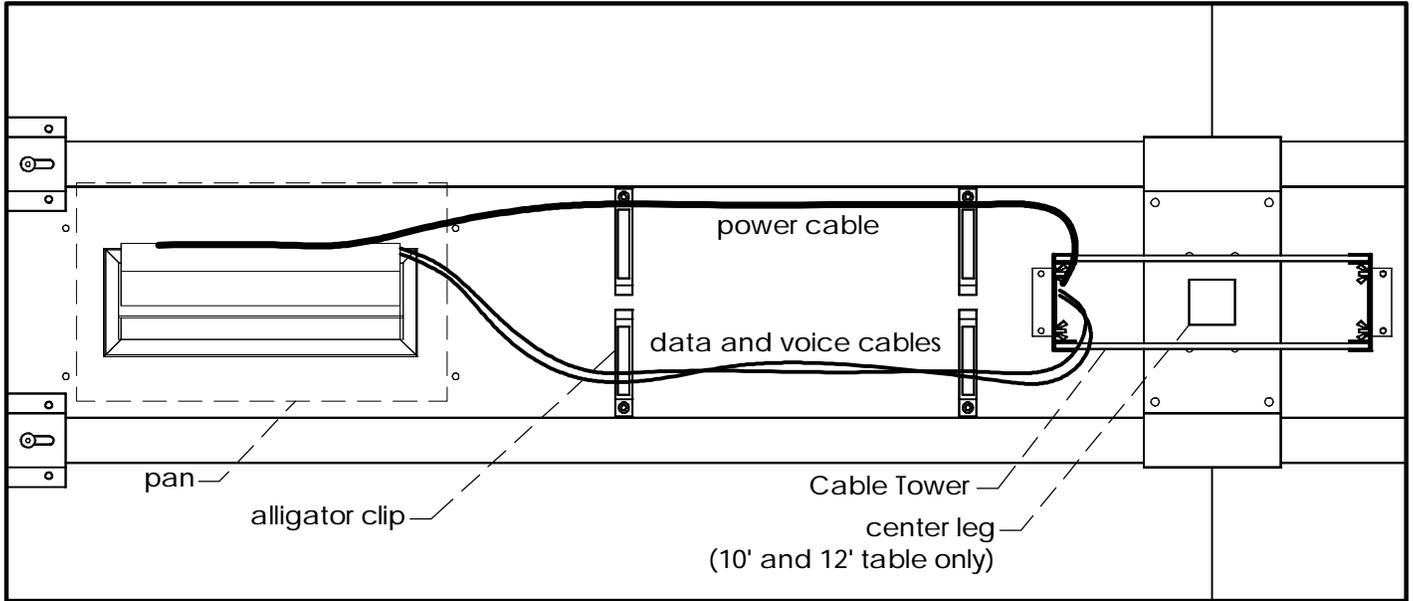
Step 5 - *for hardwire power*
Install alligator clips, conduit clips, and H-connector
and run cables from drop-in to Cable Tower.
Use #10 x 3/4" wood screw (FIG-1) to attach clips.

H-connector & clip
hardwire wip
conduit clip
hardwire power
data and voice cables
pan
alligator clip
Cable Tower
center leg
(10' and 12' table only)

Step 6
Route cables through
Cable Tower (see Cable
Tower instructions).

conduit clip
H-connector
H-connector clip
alligator clip

#10 x 3/4"
wood screw

FASTENER KEY
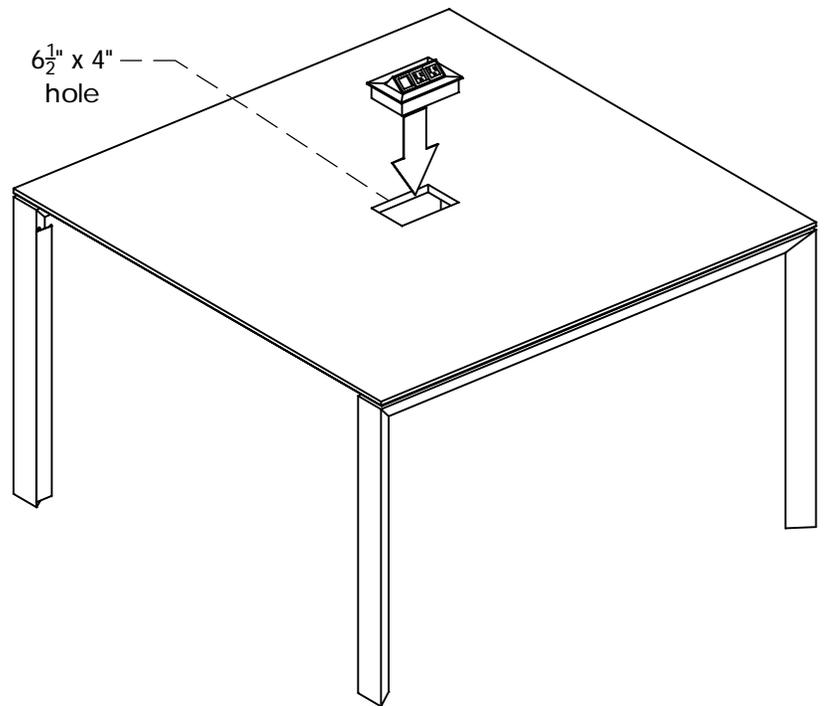
FIG-1

#10 x 3/4"
wood screw

3/4"
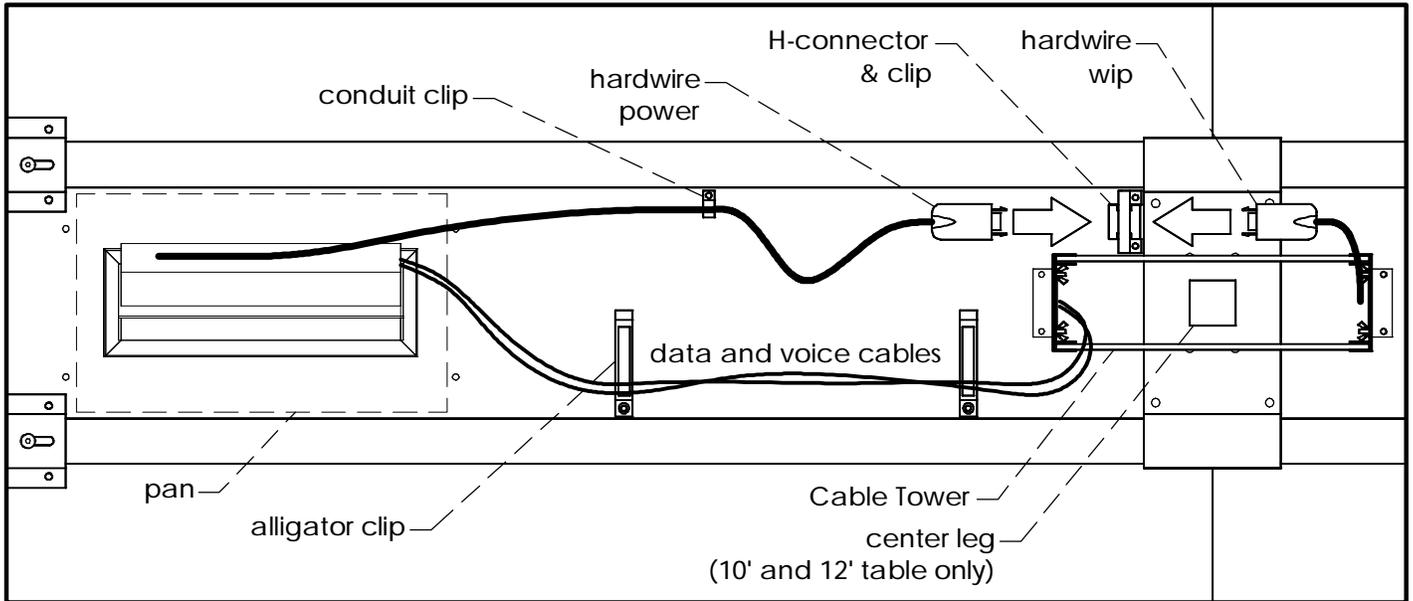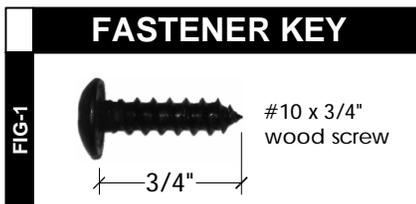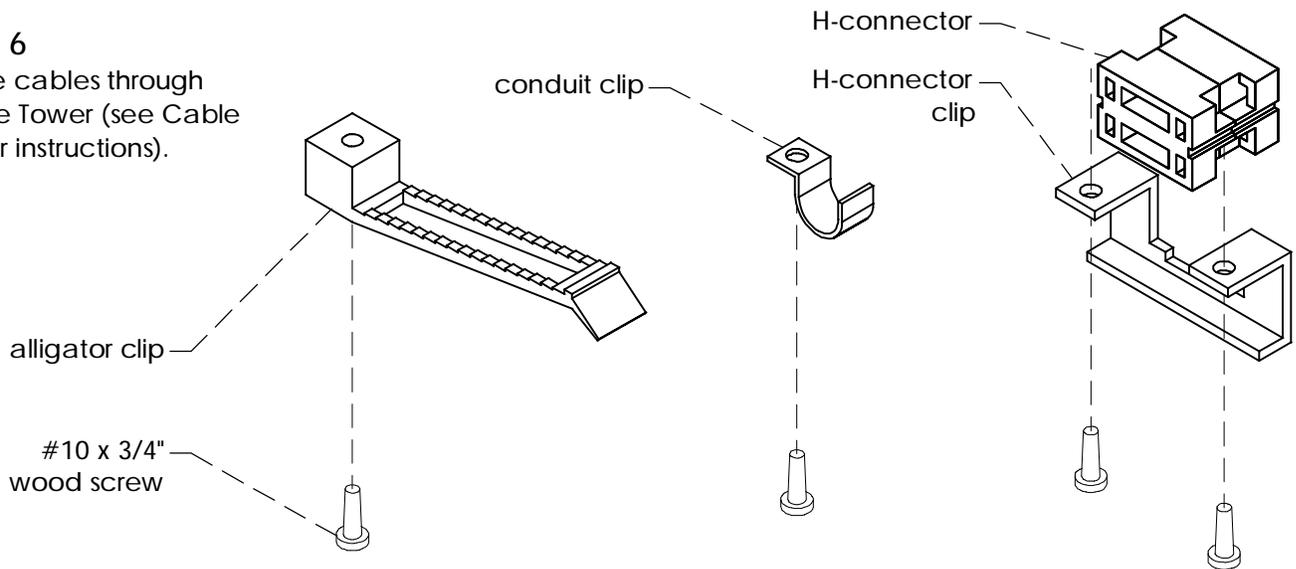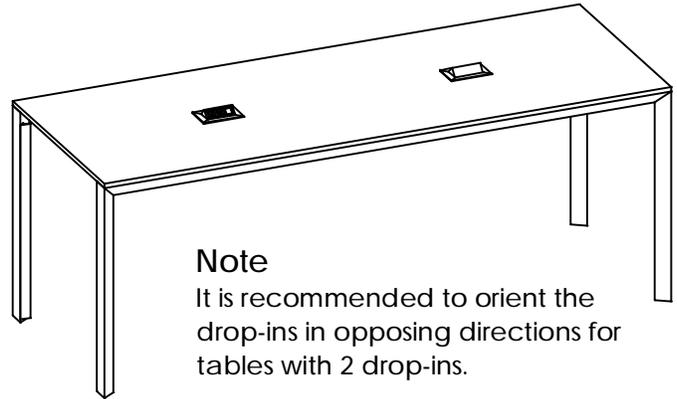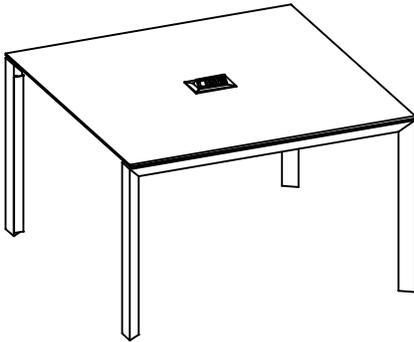
Note
It is recommended to orient the drop-ins in opposing directions for tables with 2 drop-ins.

For tables without cut outs, cut a hole that is 6-1/2" x 4" for the 2-1 Drop-In. Be sure to check for conflicting hardware placement on bottom of table.
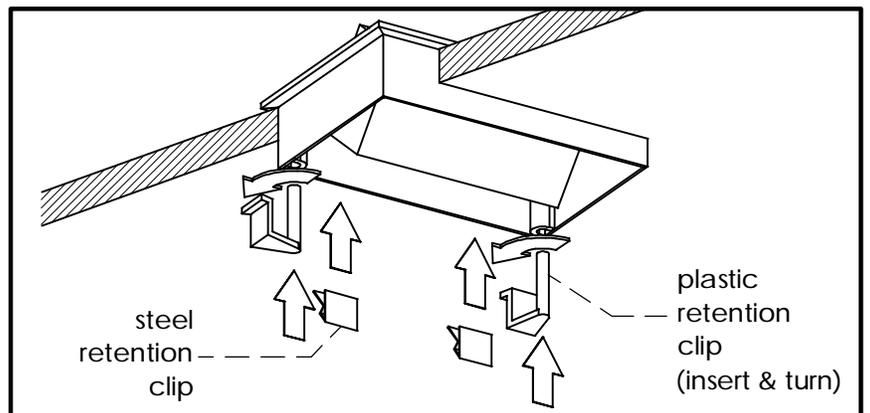
Step 1
Insert 2-1 Drop-In into hole.

$6\frac{1}{2}$" x 4" hole

Step 2
Install plastic retention clips and steel retention clips on Drop-In along hinge side.

steel retention clip

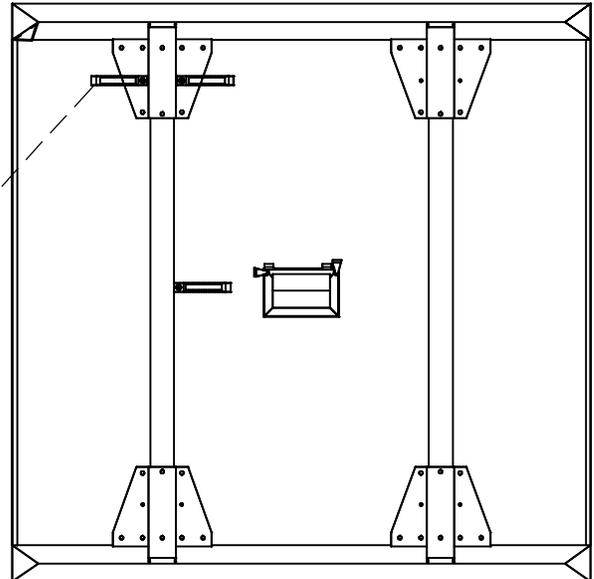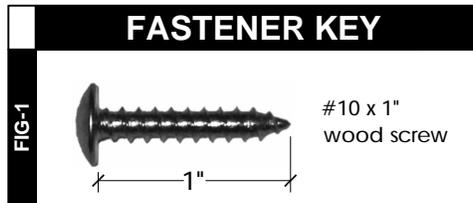plastic retention clip (insert & turn)

WATSON DESKING

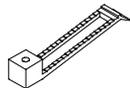## Cable routing

Step 3
Fasten Alligator Clips along route to leg nearest power source using #10 x 1" screws (FIG-1).

Alligator Clip —

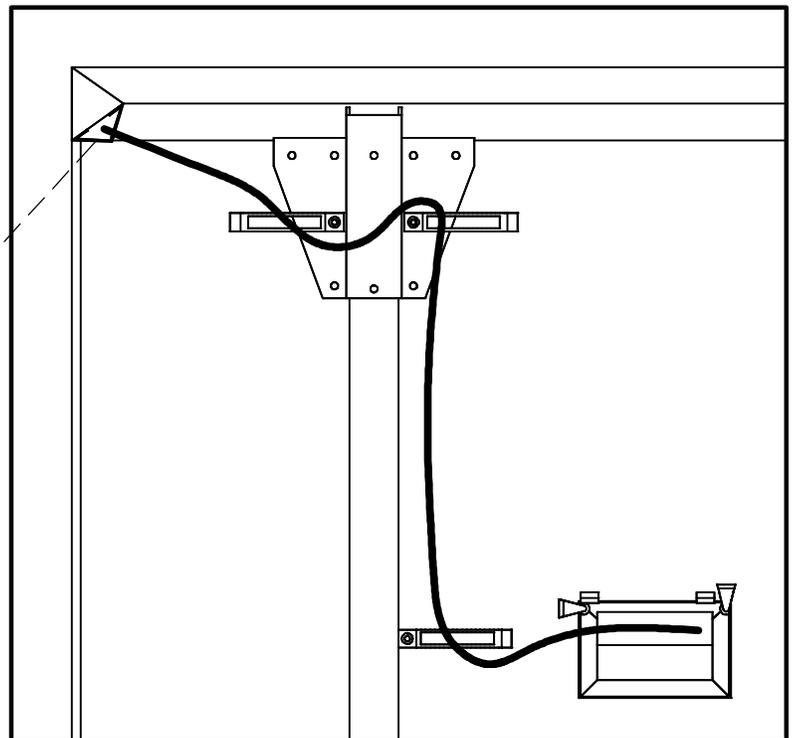| **FASTENER KEY**	
FIG-1	#10 x 1" wood screw
	1"

Step 4
Route cable(s) through Alligator Clips to Cable Channel on leg.

Cable Channel on leg —
(sold separately)

Voice and Data
Refer to manufacturer's instructions for installation of voice and data connections.