


Edison Junior Rail



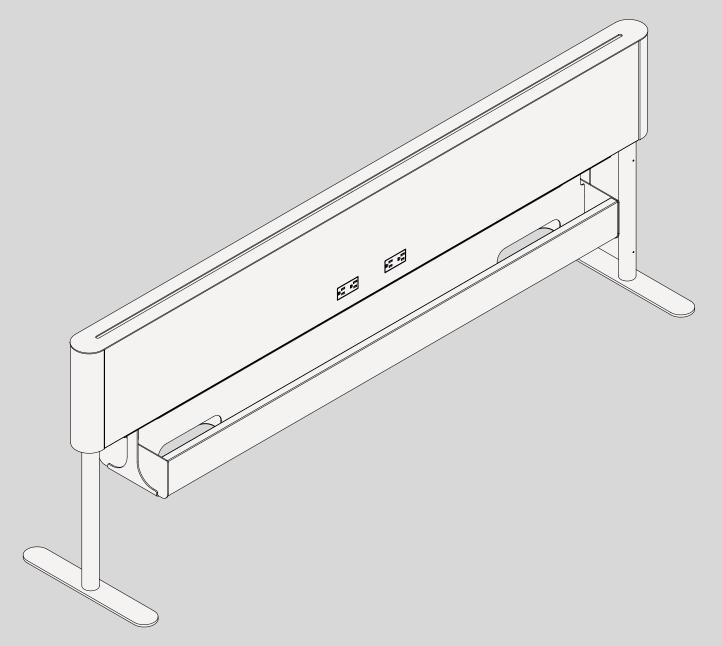

WARNINGS

WARNING - Risk of Fire or Electric Shock. It is possible for this office furnishing system to be connected to more than one source of supply. Disconnect all sources prior to any servicing. A single circuit shall not be powered by more than one source.

WARNING - Electrical connection between rail segments shall be disconnected prior to removal of a mechanical connection.

WARNING - The system may be supplied by a three phase power system with four individual circuits rated at 20 amps/120 volts maximum, or as permitted by local code.

WARNING - No more than 12 duplex receptacles shall be supplied by one circuit. (12 segments Two Duplex, 6 segments Four Duplex)

WARNING - For commercial use only.

NOTE - Installation must be in accordance with the National Electrical Code and local codes. Electrically interconnected tables need to be mechanically connected.

General Rail Assembly Notes

It is recommended to perform as much of the rail assembly upside-down, keeping in mind how many installers are available to flip the run right-side up once assembled.




If 1 - 2 installers: flip the first rail segment upside down and complete steps 1 & 2. Then flip the rail right side up and continue with instructions, adding one segment at a time for step 3.




If 3+ installers: complete steps 1-4 with the rail flipped upside down. Once complete, flip right side up. The length of run will determine how many installers are needed to perform the flip.

Edison Junior Rail Components

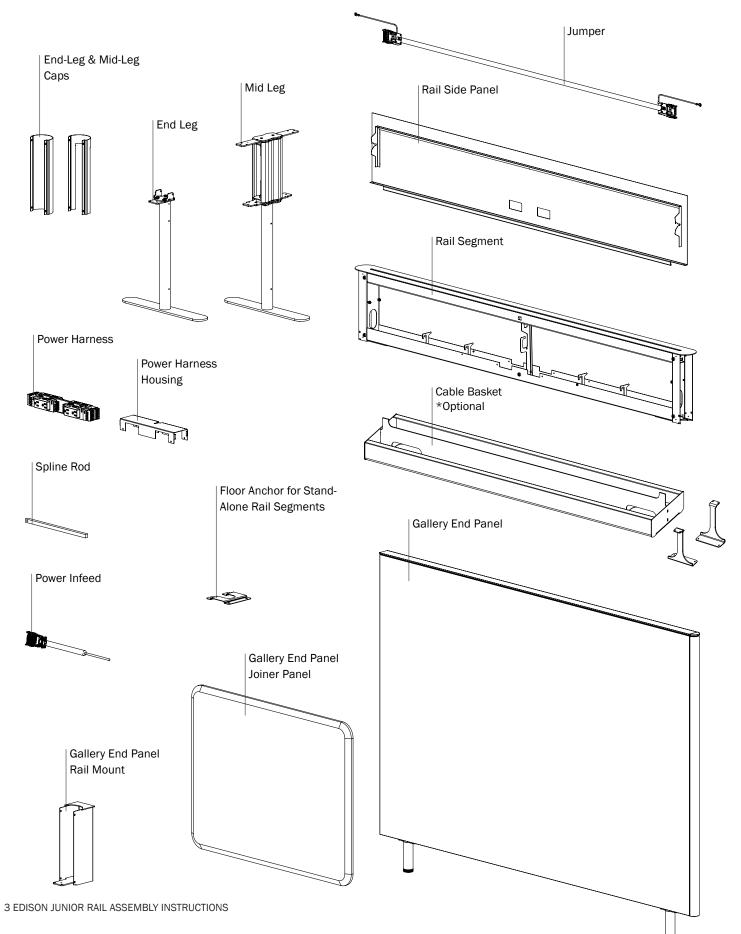

Hardware





Screw M6 x 50MM

(0003010)

Partial Socket, Black



Screw M6-1.00 x 12MM BHSCS, Black (125285)



Screw M6 x 30MM BHSCS, Black (0002086)










8-32x1/4" Screw, Steel (121538)

18-8 Lock Washer #8.34" OD (121406)




Floor Anchor Screw (48013)

*Only included if customer specified the optional Cable Basket



M6 - 1.00 X 12MM BHSCS (125290)




Clip 5/8" Conduit, Black (391001)






Coupler I Connect (053714)

Tools

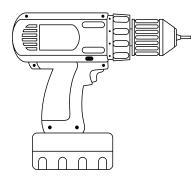

Electric Drill









Phillips Drill/Driver Bit


2mm Hex Drill/ Driver Bit

3mm Hex Drill/ Driver Bit




Additional tools such as a 90 Degree Bit and an 18" Extension are helpful for some steps

*No torque or ball bits should be used

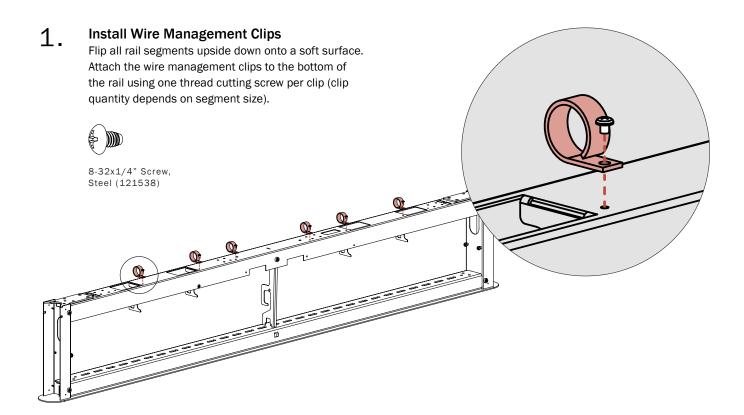


2. Mount End Leg to Rail

Start with the first rail of the run, and slide the end leg and one on each side.

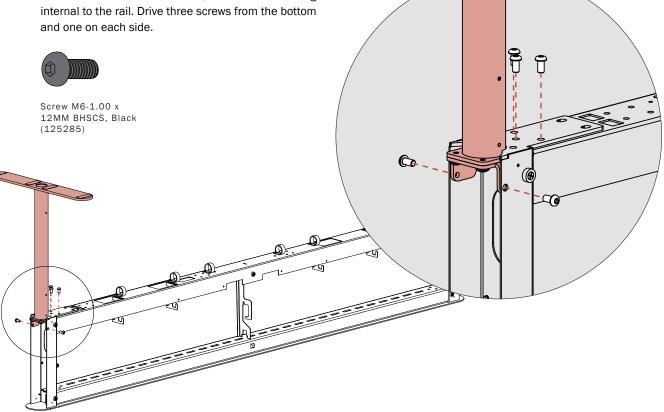


3. Mount End Cap to Rail

Slide the end cap on from below to clear the end leg fastener. Screw on the end cap from both sides with (2) screws per side. Repeat steps 2 - 3 for the end-of run rail segment.

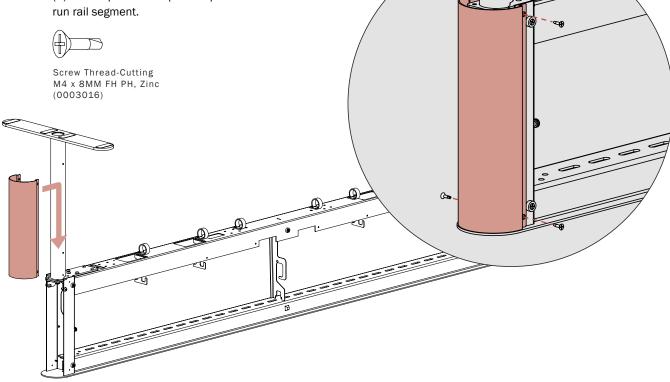

G

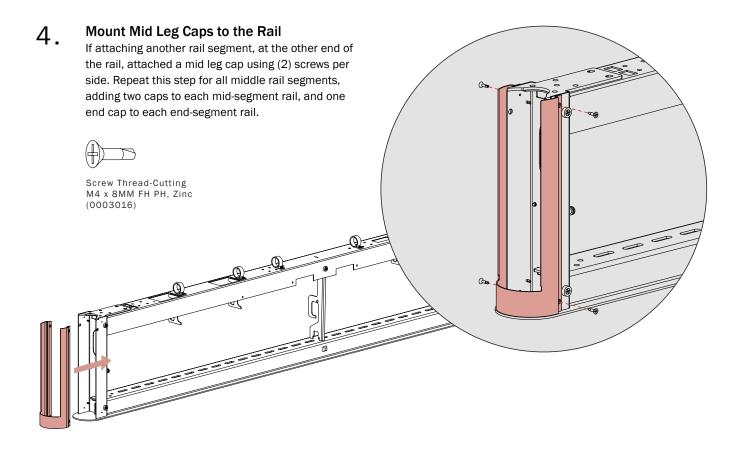

5. Connecting Rail Segments

After installing the mid leg caps, slide the rails onto the mid leg assembly. The openings in the caps at the end of each rail segment should fit snuggly around the mid leg assembly brackets. The below example shows two end rail segments connected with one mid leg.


<complex-block><complex-block>


Optional Gallery End Panel Assembly


If the customer ordered Gallery End Panels, assembly will take place at this step in the process. If no Gallery End Panels were ordered, continue to Step 13.

7. One-Piece Panels: Attach Rail Mount

Screw the rail mount to the panel using (4) screws, continue to step 11.

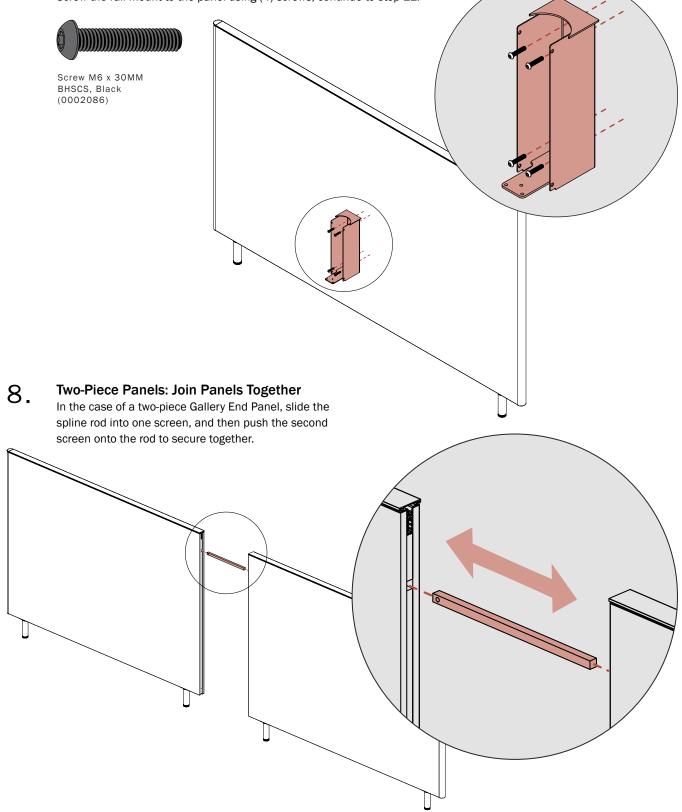

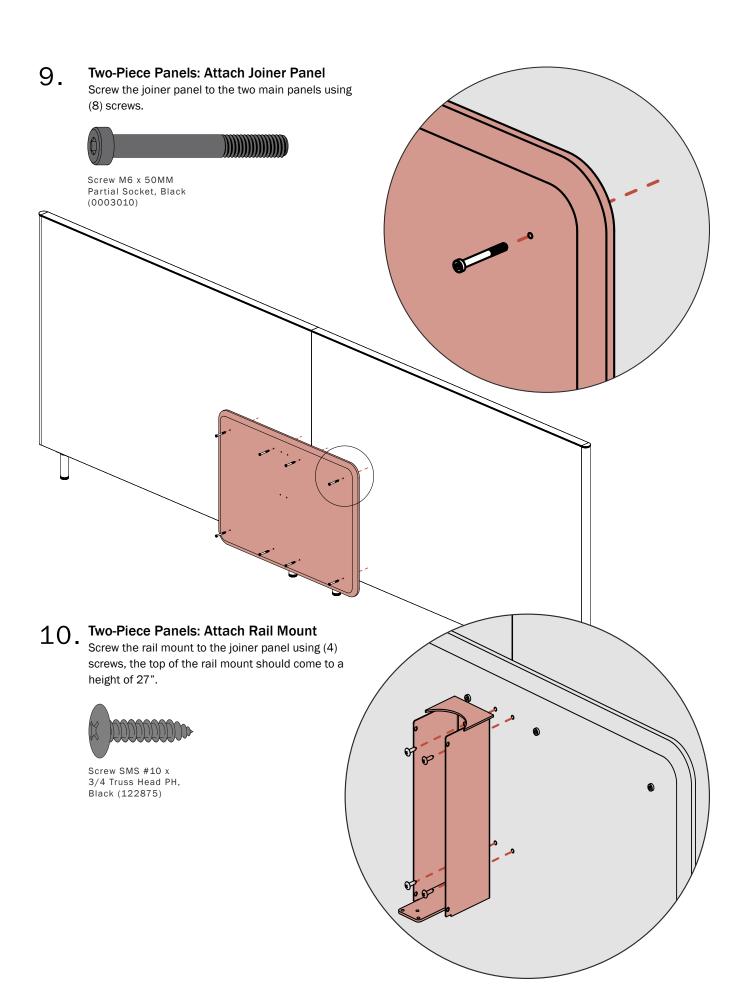

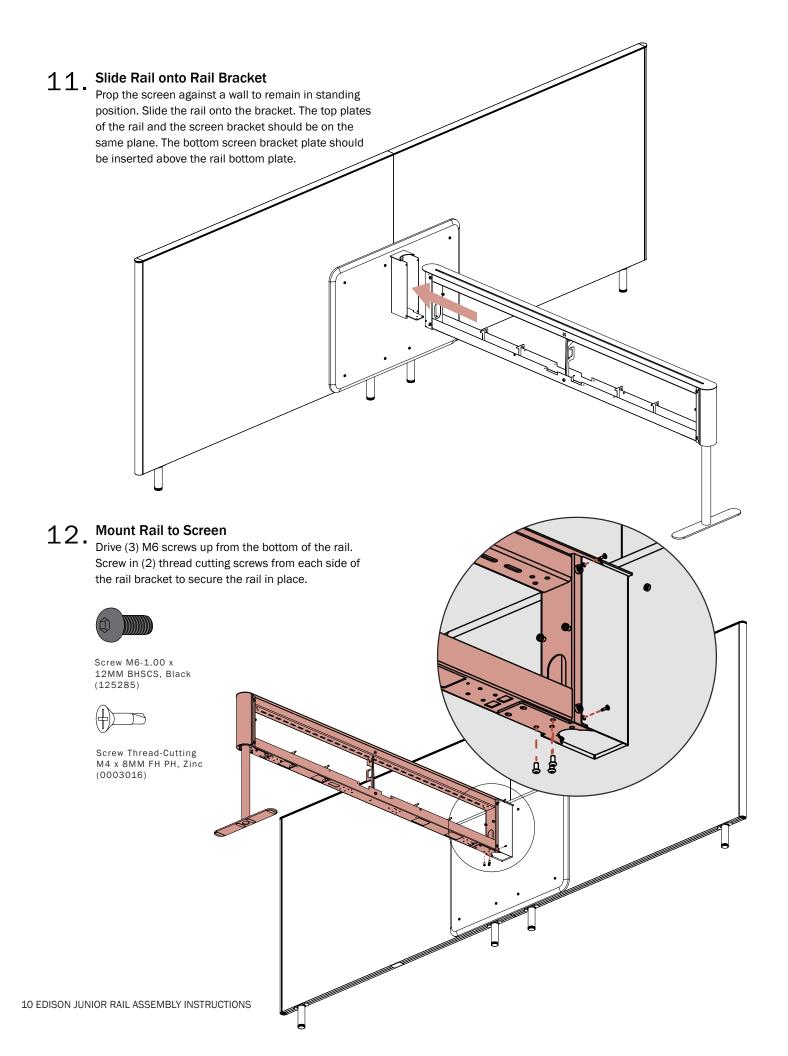


13. Install Jumpers and Power Harness


Align power harness outlets with cutouts in the rail segment. Feed the infeed through the cutout in the bottom of the appropriate rail segment* and connect it to the power harness. Next feed the jumper through the mid leg and connect each end to each power harness. Jumpers only connect in one orientation: arrows on jumper and harness will align to indicate proper connection. Ensure the jumper plastic clips are engaging the harness lip to prevent disconnection. The mid leg must be straight at the time of routing the jumper through.


F

J

* Infeed can go into any of the cutouts in the rail segment to power up a rail.

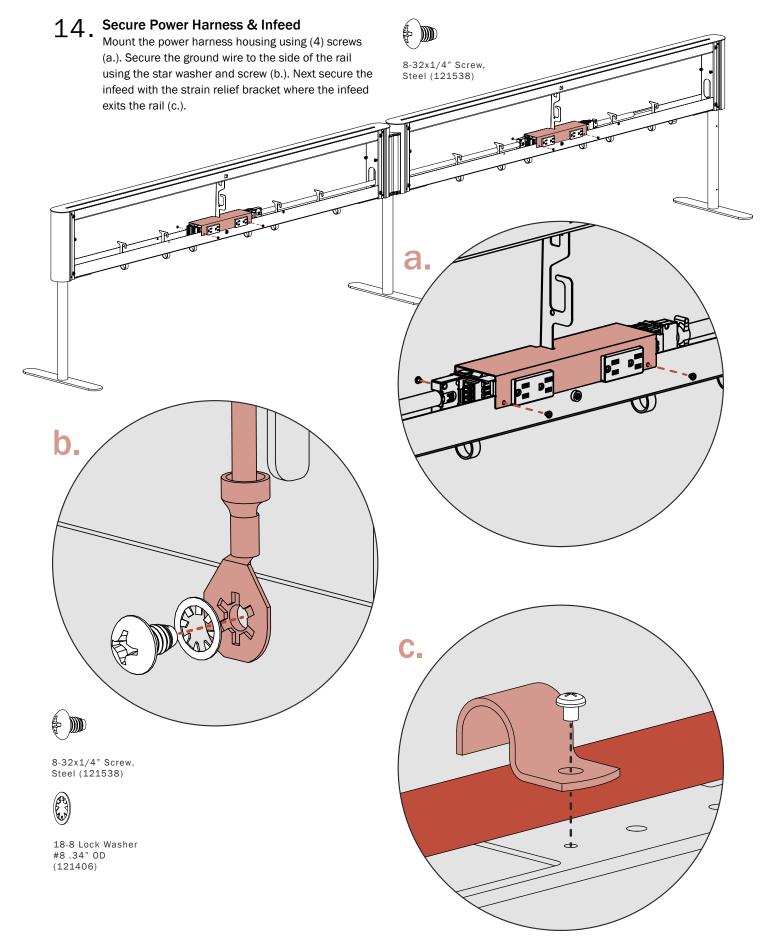

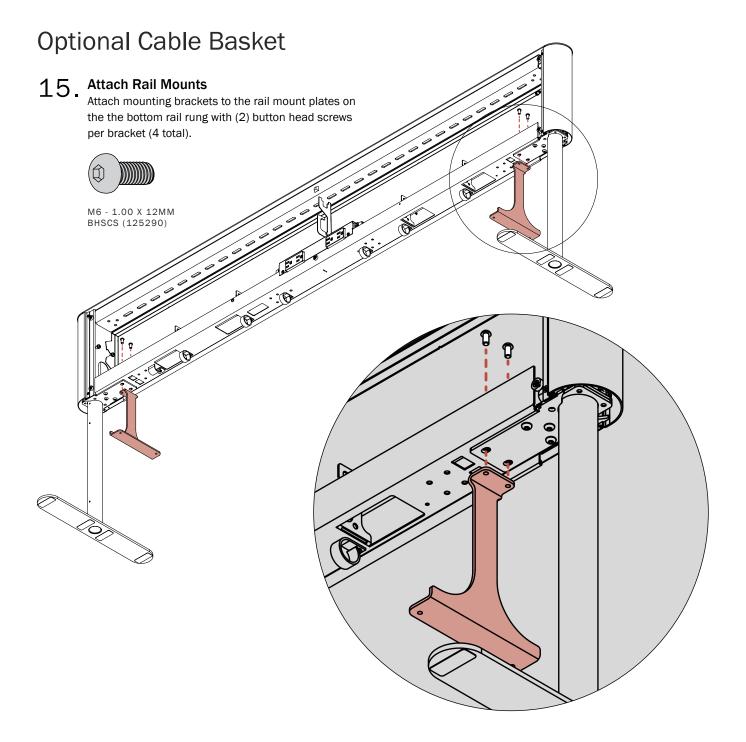

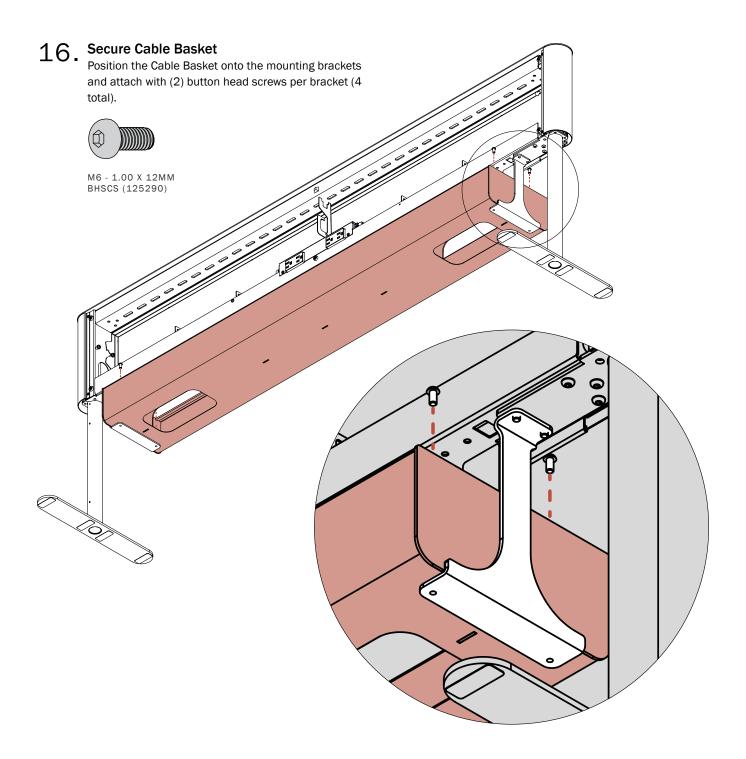


17. Attach Side Panels

[If installing rail accessories, assembly will take place at this step in the process, before attaching side panels. Refer to separate Edison Rail Accessories Assembly Instruction document.] Holding the bottom handle of the side panel, align the cutouts for the power with the plug faces in the rail and push against the rail. Magnets will catch and secure the panel to the rail.

18. Bending the Rail

Once the run is assembled, and power/data is installed, bend the rails to the desired angles. The mid legs can bend to 90 degrees in either direction. The mid leg feet will pivot as the rail segments bend and should always remain perpendicular to the mid leg assembly.

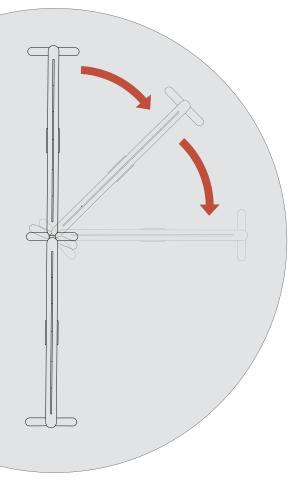

19. Leveling the Rail


Loosen the two set screws on each leg, and the foot will spin freely and telescope in and out, raising and lowering that section of rail. When the desired height is reached, re-tighten the screws. PLEASE NOTE: the leg must always be re-tightened so the foot sits perpendicularly to the rail for the end legs, and perpendicular to the mid leg assembly for the mid feet.

*** ***

8 8 8 8 8 8 8

20. Floor Mount (for single rail segments)

In the case of a stand alone rail segment, the rail assembly must be mounted to the floor using the supplied floor anchor bracket and (4) floor anchor screws. Repeat with other End-Leg.




Floor Anchor Screw (48013)


Wiring Schematic

120 / 240V 1 ph For 2+2 Use Circuits 1, 3▲, 4 ▲ ONLY For 3+1 Use Circuits 1, 3, 4▲ ONLY

circuit 2 can not be utilized with 120/240V

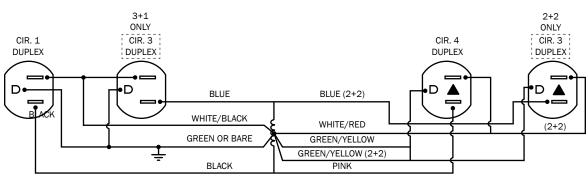

120 / 208V 3 ph For 2+2 Use Circuits 1, 2, 3▲, 4▲ ONLY For 3+1 Use Circuits 1, 2, 3, 4▲ ONLY

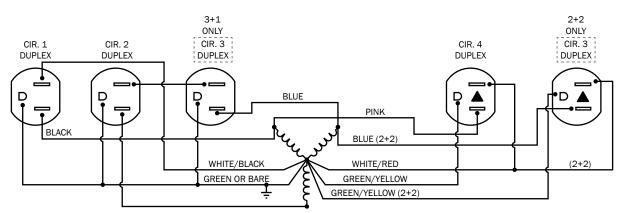

WARNING: Risk of fire or electric shock. This office furnishing system may be connected to more than one source of supply. All sources must be disconnected prior to any servicing. No single circuit may be powered by more than one source.